


SKF TKTL 11



Table of contents

Safety recommendations.....	3
EC Declaration of conformity	4
1. Introduction.....	5
2. Quick start.....	5
3. Features	5
4. Technical data.....	6
5. Front panel and button description	7
6. Display overview	9
7. Measurement settings	9
8. Maintenance	10
8.1 Storage & cleaning	10
8.2 LCD error messages.....	10
8.3 Batteries	10
9. Notes	11
10. Emissivity table.....	12

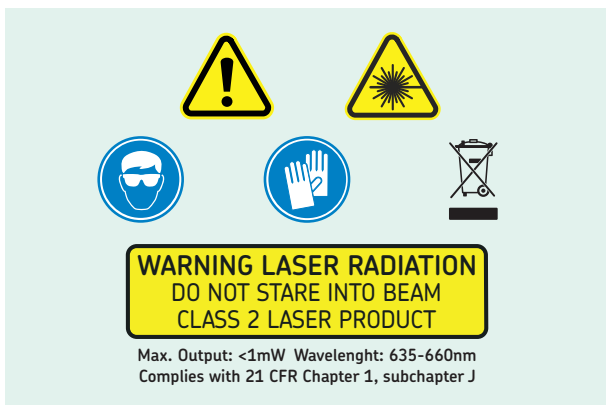

Safety recommendations

- Always read and follow the operating instructions for use.
- Never stare directly into the laser source. Class II laser product.
- Never aim the laser beams into anyone's eyes.
- Never open the instrument.
- Never use the instrument under rain or very wet conditions
- Not for intrinsically safe area
- All repair work should be taken care of by an SKF repair shop.
- Here is a table of hazardous substance name and concentration for TKTL 11:

Part name	Hazardous Substances					
	Lead	Mercury	Cadmium	Hexavalent Chromium	Polybrominated biphenyls	Polybrominated diphenyl ethers
	(Pb)	(Hg)	(Cd)	(Cr(VI))	(PBB)	(PBDE)
Laser module	x	•	•	•	•	•

The table is prepared in accordance with the provisions of SJ/T11364.

- : Indicates that said hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement of GB/T 26572.
- x: Indicates that said hazardous substance contained in at least of the homogeneous materials used for this part is above the limit requirement of GB/T 26572.

EC Declaration of conformity

We, SKF Maintenance Products, Meidoornkade 14, 3992 AE Houten, The Netherlands herewith declare under our sole responsibility that the products described in these instructions for use, are in accordance with the conditions of the following Directive(s):
EMC DIRECTIVE 2014/30/EU
and are in conformity with the following standards:

EN 61326-1:2013, EN 61326-2-2:2013
Emission: CISPR 11:2009+A1: 2010, Class B
Immunity: IEC 61000-4-2:2008
IEC 61000-4-3:2010
IEC 61000-4-8:2009

Laser standards: 21 CFR, ch 1-J
WEEE: European Directive 2012/19/EU
RoHS: RoHS DIRECTIVE (EU) 2015/863
CE requirements: CE certified



Houten, The Netherlands, March 2020

A handwritten signature in black ink, appearing to read 'Gondová'.

Mrs. Andrea Gondová
Manager Quality and Compliance

1. Introduction

The SKF TKTL 11 is a portable, lightweight instrument for safely measuring temperatures at a distance. Simply aim and pull the trigger and the temperature is shown on the display.

Users can also measure temperatures using degrees Fahrenheit.

2. Quick start

1. Simply aim the thermometer at the measure target with Lens (4) and press Meas. key (3) to display the surface temperature.
2. During the measurement, the MAX reading will be displayed beside the icon.
3. The Distance:Spot is 16:1.
Please make sure the target area is within the field of view.


3. Features

- LCD color display
- 8 laser targeting
- Fixed emissivity
- High accuracy
- Fast response time
- DS ratio of 16:1

As the distance (D) from the object increases, the spot size (S) of the area measured by TKTL 11 becomes larger.

The relationship between distance and each unit is listed below.


The spot size indicates 90% measured energy.

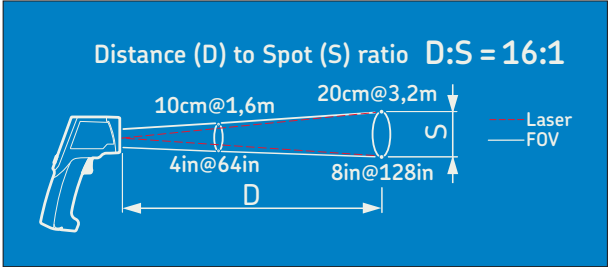


4. Technical data

Designation	TKTL 11
Temperature range	-60 to 625 °C (-76 to 1 157 °F)
Environmental limits	
Operation	0 to 50 °C (32 to 122 °F) 10 to 95% R.H.
Storage	- 10 to 60 °C (14 to 140 °F) 10 to 95% R.H.
Full range accuracy	
Tamb = 25°C	Tobj = 15 to 35 °C, +/- 1.0 °C (1.8 °F)
Tamb = 23 +/- 3°C	Tobj = 0 to 625 °C, +/-2% of reading or 2 °C (4 °F) whichever is greater
Tamb = 23 +/- 3°C	Tobj = -60 to 0 °C, +/- (2 + 0.05/°) °C
Response time	1 000 msec (90%)
Optics	Sense emitted, reflected and transmitted energy.
Display	Color LCD
Displayed resolution	0.1 °C/F from -76-999.9, otherwise 1 °C/F
Distance to spot size	16:1
Spectral response	8-14 µm
User selectable backlit display	No, permanently ON
User selectable laser + LED	No, permanently ON
Buttons	2 buttons. function as per instructions for use
Emissivity	Pre-set 0.95
Laser pointers	8 laser dots
Laser wavelength	635 - 660 nm
Laser	Class 2
Maximum laser power	1 mW
Dimensions	119.2 × 171.8 × 47.5 mm (4.7 × 6.8 × 1.9 in)
Packed	White Carton Box
Weight	400 g (0.88 lb)
Battery lifetime	typical 12 hours, min 9 hours continuous use with laser and backlight
Switch off	Automatic after 15 seconds after trigger is released

5. Front panel and button description

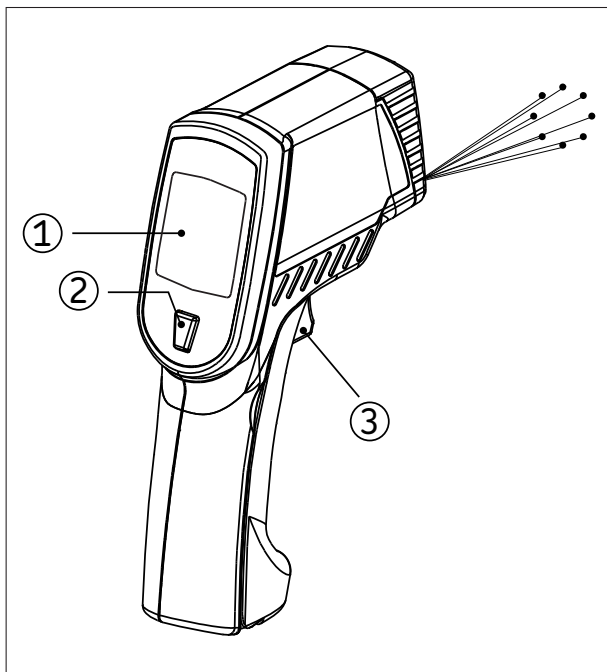

Item	Description
1	LCD
2	Mode key
3	Meas. key

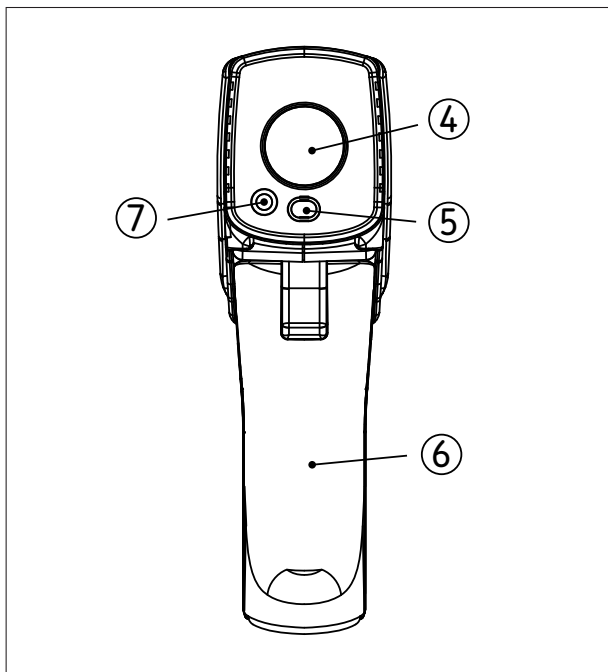

Item	Description
4	Infrared lens
5	Multi-beams
6	Battery cover
7	LED

6. Display overview

- In MAX mode: During the measurement
- The Bar display indicates the measured temperature.
- The bar shows RED color when the reading is close to maximum value, and shows BLUE when close to minimum. While the temperature is between the maximum and minimum, the bar will display in YELLOW.



7. Measurement settings

- Degrees C or degrees F
- Press Mode key (2) for °C or °F transferred.
- Backlight: LCD Backlight always on.
- Laser: always enabled while measuring.

8. Maintenance

8.1 Storage & cleaning

It should be stored at room temperature. The sensor lens is the most delicate part of the thermometer. The lens should be kept clean at all times, care should be taken when cleaning the lens using only a soft cloth or cotton swab with water or medical alcohol, allowing the lens to fully dry before using the thermometer. Do not submerge any part of the thermometer.

8.2 LCD error messages

The thermometer incorporates visual diagnostic messages as follows:

'Er2' is displayed when the thermometer is exposed to rapid changes in the ambient temperature.

'Er3' is displayed when the ambient temperature exceeds 0 °C (32 °F) or +50 °C (122 °F). The thermometer should be allowed plenty of time (minimum 30 minutes) to stabilize to the working/room temperature.

Error 5-9, for all other error messages it is necessary to reset the thermometer. To reset it, turn the instrument off, remove the battery and wait for a minimum of one minute, reinsert the battery and turn on. If the error message remains please contact the Service Department for further assistance.

'Hi' or 'Lo' is displayed when the temperature being measured is outside of the measurement range.

8.3 Batteries

The thermometer incorporates visual low battery indication as follows:

- 'Battery OK': measurements are possible.
- 'Battery Low': battery needs to be replaced, measurements are still possible.
- 'Battery Exhausted': measurements are not possible.

When the 'Low Battery' icon indicates the battery is low, the battery should be replaced immediately with AAA, 1.5V batteries.

Please note: It is important to turn the instrument off before replacing the battery otherwise the thermometer may malfunction. Dispose of used battery promptly and keep away from children. If the device is not to be used for a long time, turn the power off, remove and store the batteries in a cool, dry place.

9. Notes

How does Infrared work?

Infrared thermometers measure the surface temperature of an object. The unit's optics sense emitted, reflected, and transmitted energy, which is collected and focused onto a detector.

The unit's electronics translate the information into a temperature reading, which is displayed on the unit.

The laser is used for aiming purpose only.

- **Field of View**

Make sure the target is larger than the unit's spot size.

The smaller the target, the closer you should be.

When accuracy is critical, make sure the target is at least twice as large as the spot size.

- **Distance & Spot Size**

As the distance (D) from the object increases, the spot size (S) of the area measured by the unit becomes larger.

See figure at the beginning of this manual.

- **Locating a hot Spot**

To find a hot spot aim the thermometer outside the area of interest, then scan across with an up and down motion until you locate hot spot.

- **Reminders**

- Do not use the unit to measure shiny or polished metal surfaces (stainless steel, aluminum, etc.). See Emissivity.
- The unit can not measure through transparent surfaces such as glass. It will measure the surface temperature of the glass instead.
- Steam, dust, smoke, etc., can prevent accurate measurement by obstructing the unit's optics.

- **Emissivity**

Emissivity is a term used to describe the energy-emitting characteristics of materials.

Most (90% of typical applications) organic materials and painted or oxidized surfaces have an emissivity of 0.95 (pre-set in the unit).

Inaccurate readings will result from measuring shiny or polished metal surfaces. To compensate, cover the surface to be measured with masking tape or black paint. Allow time for the tape to reach the same temperature as the material underneath it.

Measure the temperature of the tape or painted surface.

10. Emissivity table

Substance	Thermal emissivity	Substance	Thermal emissivity
Asphalt	0,90 to 0,98	Cloth (black)	0,98
Concrete	0,94	Human skin	0,98
Cement	0,96	Leather	0,75 to 0,80
Sand	0,90	Charcoal (powder)	0,96
Earth	0,92 to 0,96	Lacquer	0,80 to 0,95
Water	0,92 to 0,96	Lacquer (matt)	0,97
Ice	0,96 to 0,98	Rubber (black)	0,94
Snow	0,83	Plastic	0,85 to 0,95
Glass	0,90 to 0,95	Timber	0,90
Ceramic	0,90 to 0,94	Paper	0,70 to 0,94
Marble	0,94	Chromium oxides	0,81
Plaster	0,80 to 0,90	Copper oxides	0,78
Mortar	0,89 to 0,91	Iron oxides	0,78 to 0,82
Brick	0,93 to 0,96	Textiles	0,90

The contents of this publication are the copyright of the publisher and may not be reproduced (even extracts) unless prior written permission is granted. Every care has been taken to ensure the accuracy of the information contained in this publication but no liability can be accepted for any loss or damage whether direct, indirect or consequential arising out of the use of the information contained herein.

skf.com | mapro.skf.com | skf.com/mount

® SKF is a registered trademark of the SKF Group.

© SKF Group 2020

MP5493 · 2020/03